



TeddyCam

Webcam Multifonctions

Mode d'emploi



Entrée Micro



Le micro est compris dans votre webcam, il faut brancher le cordon du micro à votre ordinateur pour pouvoir l'utiliser

Table de matières

Introduction-----
Spécification -----
Installation du driver-----
Vérifier l'installation-----
Prise de photos-----
Enregistrement vidéo-----
Conseils d'utilisation-----
Entretien-----
Résolution de problèmes-----

Introduction

Merci d'avoir choisi notre webcam. Veuillez lire attentivement cette notice avant toute utilisation.

Système Requis :

- Processeur 700Mhz, 64 Mo de RAM et 200Mb disponible sur le disque dur.
- Win98SE, Win2000, WinXP
- Port USB libre
- Carte VGA couleur 16 bit
- Carte son avec entrée microphone
- Casque audio

Pour le modèle compatible USB2.0, il est conseillé d'utiliser Win2000 ou XP

Note : Les spécifications du produit peuvent être changées sans préavis. Merci de vous référer au produit lui-même.

➤ Spécification

Sunplus561+

- ❖ Utilise processeur principal CMOS SUNPLUS561
- ❖ Résolution 100K pixels, max. 640x480
- ❖ Objectif : objectif en verre 5 couches
- ❖ Format vidéo : couleur 24bit, VGA/CIF
- ❖ Mise au point : 3cm à l'infini
- ❖ Distance minimum : 1cm
- ❖ Interface : USB 1.1, plug & play
- ❖ Angle de prise de vue : 45-60°

Système Requis

Windows 98SE/ME/2000/XP

Processeur 300 MHz ou plus, 64Mo de RAM

50Mo de disque dur disponible

Ecran couleur


Microphone et haut parleurs

Un port USB disponible


➤ Installation du driver

IMPORTANT : Installer le driver AVANT de connecter la webcam à votre ordinateur.


Insérer le CD Rom dans le lecteur de votre ordinateur. Il se lancera automatiquement (sinon lancer le fichier autorun.exe).

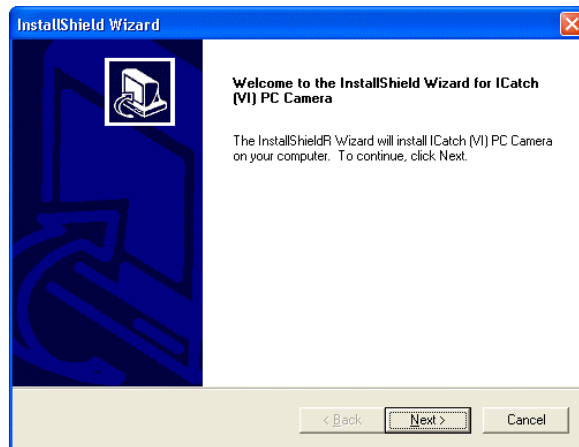

Cliquer sur "Next"

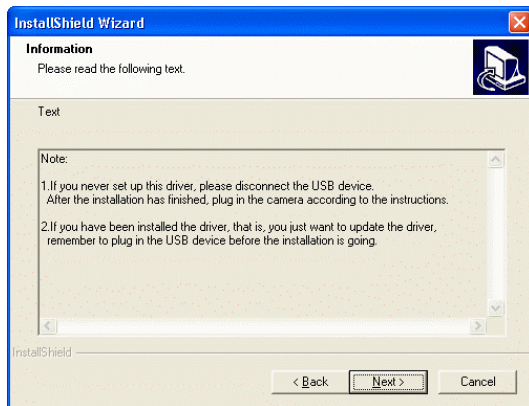

Cliquer sur "Next"

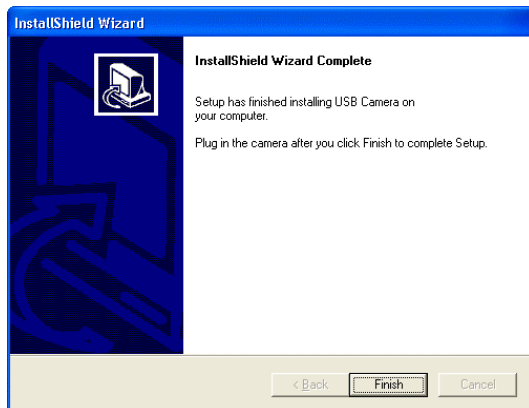

Cliquer sur "Finish" pour terminer l'installation.

Connecter la webcam à votre port USB. Le système la reconnaîtra automatiquement.

➤ **Vérifier l'installation :**

Une fois l'installation terminée, "PC Caméra" apparaîtra dans "Programmes" du menu Démarrer de votre ordinateur.




Vous verrez votre webcam ici

La webcam est compatible avec tout les logiciels de communication standards (Messenger, Yahoo, etc...)

➤ Prise de photos

Pour prendre des photos avec votre webcam :


Ouvrir Amcap

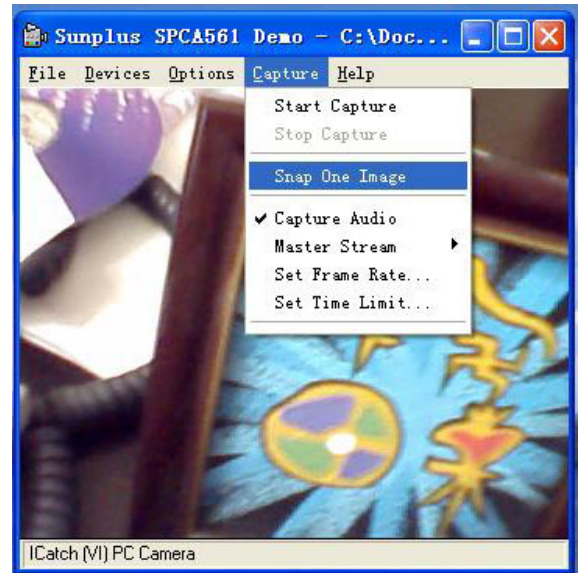


Sélectionner "Snap One Image" pour prendre une photo

➤ Enregistrement vidéo

Vous pouvez également enregistrer de la vidéo

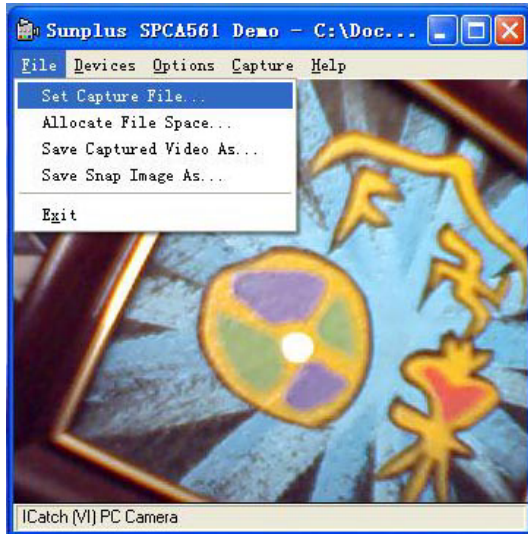

1. Dans Amcap, aller dans "File", puis "Set capture file" pour choisir l'emplacement de votre fichier.

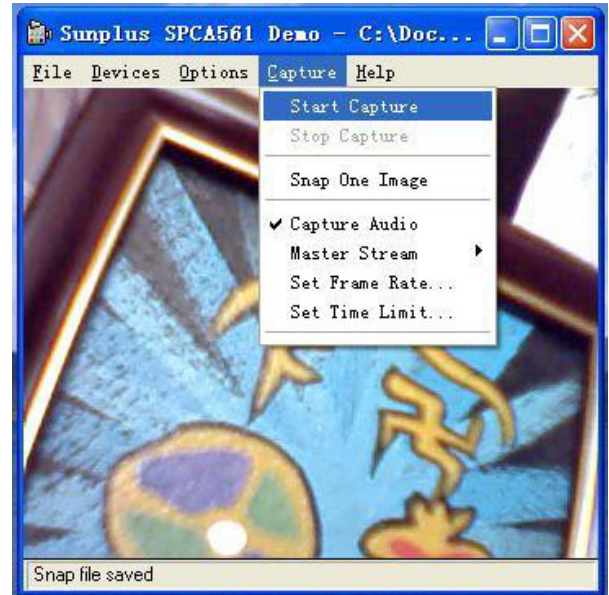

2. Aller dans "Capture", puis "Start Capture" pour démarrer l'enregistrement



3. Cliquer sur "Stop Capture" pour arrêter l'enregistrement

➤ Enregistrement vidéo

Dans la fenêtre Amcap, cliquez sur "File", puis "Set Capture File". Entrez un nom de fichier, sélectionnez le format (.avi), cliquez sur "Open" puis "OK".

Vous pouvez ajuster la luminosité et la mise au point en tournant l'objectif.

Cliquez sur "Set Time Limit" et "Capture" pour programmer la durée de l'enregistrement. Après configuration, cliquez sur "Use Time Limit", puis "OK", vous pouvez commencer à enregistrer. Cliquez sur "Capture", puis "Start Capture". "Ready to capture" sera affiché, alors cliquez sur "OK" pour commencer. Le décompte de temps commencera et s'arrêtera à la fin de la durée programmée.

Cliquez sur le nom du fichier pour voir le résultat

Cliquez sur la croix (X) pour fermer la fenêtre AMCAP et retourner sur le Bureau. Utilisez Windows Media Player pour voir vos enregistrements.

Remarque:

Cliquez sur “Stop Capture” pour arrêter l’enregistrement si vous n’avez pas programmé la durée d’enregistrement.

Précautions d’emploi

Evitez de toucher l’objectif avec la main ou des matériaux abrasifs. Utilisez un chiffon doux et propre pour nettoyer l’appareil.

Ne pas utiliser votre webcam dans des conditions extrêmes (très chaud, froid, humide ou poussiéreux).

Evitez de laisser tomber votre appareil, car les chutes peuvent endommager l’objectif et provoquer des problèmes de fonctionnement.

➤ Conseils d'utilisation**Emplacement de la webcam**

- Positionner la webcam de telle manière que le sujet soit au centre du champ de l’objectif.
- Placer la webcam de manière à ce qu’elle soit stable.

Eclairage

- Utiliser un éclairage suffisant
- Placer la source de lumière derrière la caméra, en face du sujet
- Maintenir un seul type d’éclairage (ne pas mélanger les lumières fluorescent avec d’autres types d’éclairage)
- Ne pas diriger la caméra directement vers la source de lumière.

Mise au point

- Pour une image plus nette, tourner l’objectif situé sur le devant de votre caméra (le nez du chien).

➤ **Entretien**

- Un entretien correct de votre webcam assurera une plus longue durée de vie et limitera les risques d'endommager votre webcam ainsi que votre ordinateur.
- Protéger votre webcam de l'humidité et des températures extrêmes.
- Ne jamais utiliser des détergents ou des solvants sur votre webcam.
- Ne jamais démonter ou toucher à l'intérieur de votre webcam.

➤ **Résolution de problèmes**

Si l'appareil ne fonctionne pas :

Assurez-vous que l'appareil soit correctement branché sur un port ou un hub USB.

“No capture device found” message appears.

Assurez-vous que l'appareil et le PC soient correctement branchés.

Pour trouver la webcam dans le panneau de configuration :

Double-cliquer sur "Scanneurs et Appareils photos". Si la webcam n'est pas dans la liste, débrancher la webcam et la rebrancher sur le port USB de votre ordinateur.

A noter: Si la webcam se trouve dans la liste mais d'autres caméras sont également installées, débrancher les autres caméras et assurez-vous que votre "TeddyCam" soit bien branchée.

Le message d'erreur "Camera is not present or already in use" apparaît:

Vérifier que la connexion USB soit en bonne état. Vérifier la catégorie 'Périphérique d'image' dans le gestionnaire de périphériques. Si l'appareil est correctement installé, il y apparaîtra. Si vous ne voyez pas la webcam ou si un point d'exclamation (!) jaune est affiché, débrancher la webcam et réinstaller les drivers.

Le système plante au démarrage si la webcam est branchée:

Modifier les paramètres BIOS pour supporter les périphériques USB.

Il n'y a pas d'image / l'image est figée :

Redémarrer votre ordinateur, réinstaller le programme ou reconnecter votre webcam.

Un point d'exclamation (!) jaune est affiché dans le gestionnaire de périphériques :

Il y a peut être un conflit avec un autre appareil ou la webcam est mal installée. Débrancher toutes les caméras USB indiquées dans le gestionnaire de périphériques, puis cliquer sur le bouton Rafraîchir. Il sera peut être nécessaire de redémarrer l'ordinateur.

Aucun contrôleur de bus USB est affiché dans le gestionnaire de périphériques :

Vous devez activer le port USB dans BIOS. Consulter le guide d'utilisation de votre ordinateur.

Au démarrage d'une vidéo conférence le message d'erreur "Could not initialize the capture device or USB camera" :

Assurez-vous que la prise USB soit bien connectée et que l'appareil soit affiché dans le gestionnaire de périphériques. Vérifier que le bon driver soit sélectionné (certaines applications vous offrent la possibilité de sélectionner le driver).

La réception vidéo n'est pas claire :

Si l'ordinateur ou la connexion Internet est lente, la réception vidéo ne sera pas très claire. Il est important que votre système corresponde aux minimum requis (voir plus haut). Choisir une taille d'image plus petite, et assurez-vous que l'éclairage soit suffisant.



Teddy Camera

Internet Video Camera

MANUAL

Catalog

Prologue-----	
Product illuminate-----	
Driver Installation-----	
Check your device-----	
Photo taking-----	
Video recording-----	
Live recording-----	
Helpful Hints-----	
Camera Maintenance -----	
Troubleshooting-----	

Prologue

First we all want to express our sincere gratitude for you to purchase our product, this manual will guide you how to use the web camera , and the sub-application of the product , Please learn careful this manual before using the web camera, that the web camera can better serve you.

System requirement

Lowest requirement above 700MHZ CPU, 64MEMS memory, at least 200M HD space/ WIN98SE, WIN2000, WIN XP system with USB interface/16 bit real color VGA card、Sound card、Microphone、Earphone、 empty USB interface.

Attention :If there are something change in product spec and Model, Please according to the product itself !

➤ Product Illuminate

Sunplus561+

- ✧ Project : Adopts SUNPLUS561main CMOS chip
- ✧ Resolution : 100K pixel, Max. Resolution 640*480
- ✧ Lens : three layers glasses lens, shimmer inducing
- ✧ Audio format : 24 bit real color、 VGA/CIF format
- ✧ Imaging distance : 3cm-infinity/normal
- ✧ 1cm-2cm/Mini. Distance.
- ✧ Interface : USB1.1, Plug and play
- ✧ View angle : 45 degree-60degree


System Requirements

PC compatible system with Pentium 300 MHz or higher, 32 MB RAM, Windows XP/2000/ME/98SE Operating System,50 MB free Hard Disk space , High/True Color Display Adapter, Microphone and speakers, Available USB Port


➤ Driver Installation

Don't connect your PC Camera to your USB port, before you were prompted to do so during the installation process.


Insert Driver disc into CD Rom, The set up launcher will start automatically (or run the autoun.exe file under the driver manager), then follow the following steps to run the set up process:

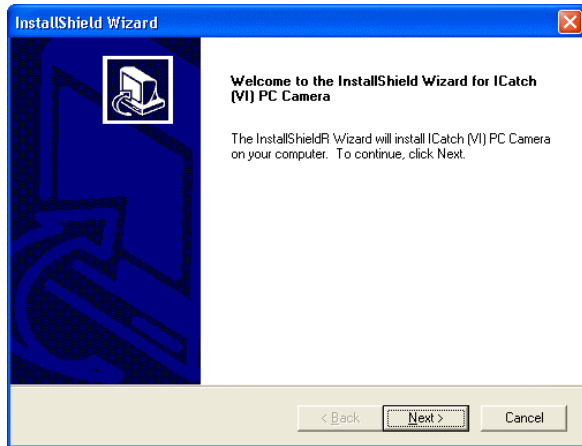

Click "Next" to continue.

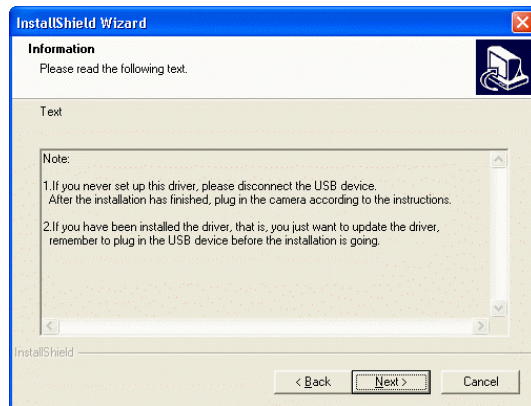

Click "Next" to continue.

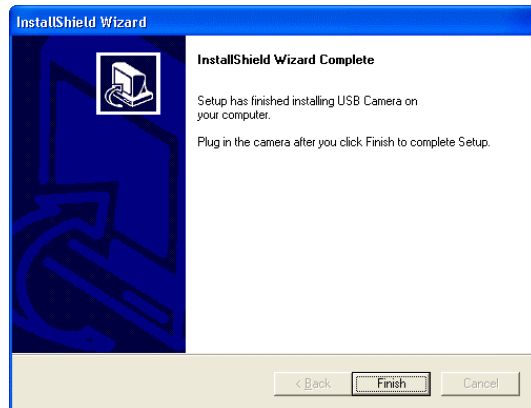

Click "Finish" to end the installation.

If you have connected your PC camera to your USB port, you can connect again, the system can recognize the PC camera immediately, you click on the related of button you will uninstall it or you click on the “ uninstall “ of Camera under the WINDOWS by directly.

➤ Check your device:

After the installation is finished, “PC camera” will be showed on the screen of the “ start” in the Windows, including a “Amcap” program which can be adjusted the Pc camera.




You can see your web cam here.

*** You may use the PC camera of USB to the communication software such as ICQ, MSN Messenger etc.

➤ Photo taking:

You can take photos with your web cam:

- Open Amcap:

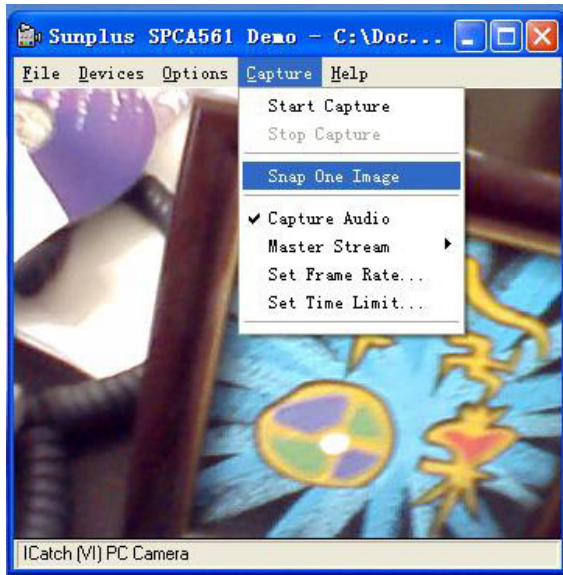


Choose "Snap One Image" to take single photo.

➤ Video recording

You can also take video with your web cam:



4. Under operation of "Amcap", go to "File", then "Set Capture File...", you can choose the location of your video.

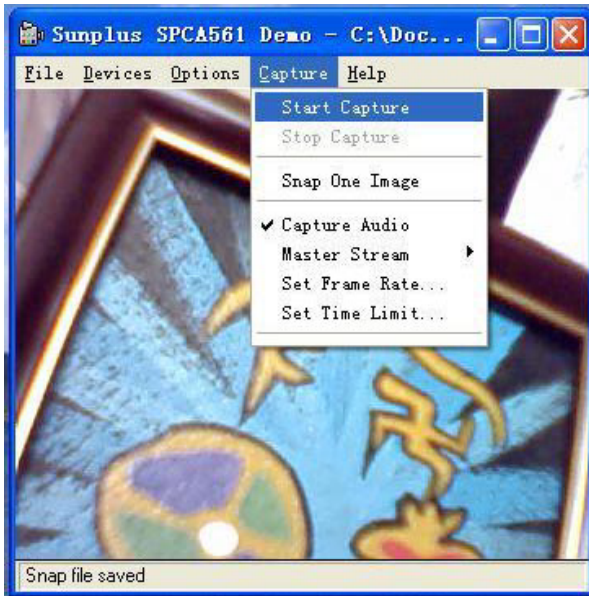

5. Go to "Capture", then choose "Start Capture" to start recording.



3. Click "Stop Capture" in "Capture" to end recording.

➤ Live Recording

1. Under operating the "AMCAP", click "File", click "Set Capture File", input file name, select file name(.avi),click "Open" and click "OK".

2. You may adjust the brightness and focus the image by turning the lens.
3. Click “Set Time Limit” at “Capture” to set the record time. After setting, click “Use Time Limit”, click “OK”, you may start to record the video. Click “Capture”, click “Start Capture” will indicate “ready to capture”, click “OK” will start recording. Timer starts to count down and will stop until times out. record completed.
4. Click the recording file names to review the result.
5. Click “X” to close “AMCAP” and back to desktop. Play your recorded file under Window Media Player or other video software..

Remarks: Press “Stop Capture” at “Capture” to stop recording if you did not set the recording time.

Cautions

- Avoid contacting to the lens with hand, sharp or coarse stuff, use clean and soft cloth for cleaning.
- Do not use it in hot, cold, dusty or humid

circumstance.

- Avoid falling as much as possible, severe falling may cause damage to the lens, malfunction or scratches to the surface

➤ **Helpful Hints**

The following hints will help you achieve the best results with your PC Camera:

Camera placement

- Position the camera so that the subject in centre.
- Place the camera on a steady surface.

Lighting

- Use sufficient lighting.
- Place the light source behind the camera and facing the subject.
- Maintain a consistent lighting environment, i.e., do not mix fluorescent and other light types.
- Do not aim the camera directly at the light source.

Focus

- For a sharper image, adjust the focus of your PC Camera by rotating the focus control located on the

front of your camera.

➤ **Camera Maintenance**

- Maintaining your PC Camera will ensure longer life and will minimize the chances of causing damage to your PC camera and computer.
- Keep the camera away from moisture and extreme temperature.
- Never use harsh or abrasive cleaners or organic solvents on the camera or on any of its parts.
- Never disassemble or touch the inside of the camera.

➤ **Troubleshooting**

If the camera does not work:

Make sure you have connected the camera correctly into an available USB port or hub.

“No capture device found” message appears.

Make sure the camera and PC are connected properly.

Locate the camera under the Windows Control Panel:

Double click Multimedia, click the Devices tab, and select Video Capture Devices. If the camera is not listed, unplug the camera and re-connect the camera into your computer's USB port.

Note: If the camera is listed, but other cameras are also installed, disable all other cameras; make sure your camera is enabled.

Why do I receive the error message "Camera is not present or already in use"?

Verify that the USB connection is secure. Check the "Imaging Device" category under the Device Manager. If the camera is installed properly, there will be an entry in this section for the video camera. If this entry does not exist, or is listed with a yellow exclamation mark, remove it, and reinstall the drivers.

When booting the PC with the USB camera plugged in, it hangs up the system.

Change the BIOS settings to support USB legacy

device. Change the BIOS settings to support USB keyboard.

No image/still image :

Reboot your computer; re-install program or re-connect your PC Camera.

There is a yellow exclamation point on my video camera in the Device Manager

There may be a conflict with the camera or the camera is not installed properly. Remove all the USB PC cameras listed in the Device Manager that has the conflict, and then click the refresh button. You may need to reboot the computer.

Why do I not have a Universal Serial Bus Controller in the Device Manager?

You must enable your USB port in the BIOS. Consult your Computer Users guide, or contact your motherboard manufacturer.

When starting a video conferencing session, I get the error message “Could not initialize the capture device, or USB camera.”

Make sure that the USB plug is inserted and that the device is listed in the Device Manger. Make sure that your application has selected the proper video capture driver for your device (the Video for Windows capture driver is listed in Control Panel; Multimedia; Advanced; Video Capture Devices). Some applications give you the option to select the video capture device.

My video reception seems poor. How do I improve it?

A. Several factors may affect the quality of the video reception. If a slower computer or slower Internet connection is being used, you may experience poorer video reception and choppy video. It is important that your computer meets the minimum system requirements. Try choosing a smaller image size to adjust in. The USB camera works best in areas where there is sufficient light.



USB PC CAMERA